



UNIS IN - OUT Board



The UNIS IN - OUT Board is a real time software based representation of people on the premises

The IN - OUT Board is linked to UNIS Template Management and Access Control Database Software

Real time population of IN – OUT Board with defined fields i.e. Name, Time, ID, Branch

Emp Name	Emp ID	Time	Transaction Terminal	Branch	Department
Adrienne	330	2013/01/25 08:37:52	IN: Virditech AC5000 IN	Cape Town	Not Assigned
Ashley	300	2013/01/25 09:06:55	OUT: Virditech AC6000	Cape Town	Not Assigned
Celeste	3102	2013/01/25 07:13:04	IN: Virditech AC5000 IN	Cape Town	Admin
Chris Grauls	150	2013/01/25 07:54:42	OUT: Virditech AC6000	Cape Town	Technical
Ian Kelleman	5666	2013/01/25 07:48:05	IN: Virditech AC5000 IN	Not Assigned	Not Assigned
John de Abreu	120	2013/01/25 08:11:21	IN: Virditech AC5000 IN	Cape Town	Development
Marij	360	2013/01/25 09:44:17	OUT: Virditech AC6000	Cape Town	Not Assigned
Megan Kahn	110	2013/01/25 08:11:06	IN: Virditech AC5000 IN	Branch TEST	Admin
Megan-Kim	260	2013/01/25 07:56:20	IN: Virditech AC5000 IN	Cape Town	Not Assigned
Michael Pieterse	101	2013/01/25 09:27:32	IN: Virditech AC5000 IN	Branch TEST	Not Assigned
Raina	315	2013/01/25 07:54:06	IN: Virditech AC5000 IN	Not Assigned	Not Assigned
Thulani	290	2013/01/25 09:33:22	IN: Virditech AC5000 IN	Cape Town	Not Assigned

o If UNIS is operating on an Access Database:

- Only one instance can operate and must be installed on the same Workstation as UNIS Server software

o If UNIS is operating on an SQL Database:

- Five (5) instances of the IN – OUT Board can run on different Remote Clients on the network

o If different instances of the IN – OUT Board are operating on an SQL Database from Remote Client workstations:

- The IN – OUT Boards can be configured for specific areas
- Terminals can be assigned to specific areas either as "IN" or "OUT" Terminals
- If the ViRDI Reader is signified as an "IN" terminal the Slave Reader (SR-100FP) will automatically be assigned as "OUT" Reader and if the ViRDI Reader is signified as an "OUT" terminal the opposite applies

ID	Name	IN	OUT	Slave
1	Turnstile R IN	X		
2	Turnstile L IN		X	
3	Turnstile L OUT	X		
4	Turnstile R OUT		X	
5	Main Entrance IN	X		
6	Main Entrance OUT		X	
7	Parking IN			
8	Parking OUT			
30	Smarti_30			



Cape Town Head Office

Collingwood Building
Blackriver Park
1 Fir Rd
Observatory
+27 (0)21 404 4600

Johannesburg

2nd Floor
Senate House
c/o van Riebeeck Ave & Terrace Rd
Edenvale
+27 (0)11 452 9604

Sales: info@virditech.co.za

Technical: support@virditech.co.za

www.virditech.co.za



UNIS IN - OUT Board



If the user is interested in when a specific person enters or leaves the premises that person can be highlighted on the in-out board.

Emp Name	Emp ID	Time	Transaction Terminal	Branch	Department
Adrienne	330	2013/01/25 08:37:52	IN: Virditech AC5000 IN	Cape Town	Not Assigned
Ashley	300	2013/01/25 09:06:55	OUT: Virditech AC6000	Cape Town	Not Assigned
Celeste	3102	2013/01/25 07:13:04	IN: Virditech AC5000 IN	Cape Town	Admin
Chris Grauls	150	2013/01/25 07:54:42	OUT: Virditech AC6000	Cape Town	Technical
Ian Kellerman	5666	2013/01/25 07:48:05	IN: Virditech AC5000 IN	Not Assigned	Not Assigned
John de Abreu	120	2013/01/25 08:11:21	IN: Virditech AC5000 IN	Cape Town	Development
Marj	360	2013/01/25 09:44:17	OUT: Virditech AC6000	Cape Town	Not Assigned
Megan Kahn	110	2013/01/25 08:11:06	IN: Virditech AC5000 IN	Branch TEST	Admin
Megan-Kim	260	2013/01/25 07:56:20	IN: Virditech AC5000 IN	Cape Town	Not Assigned
Michael Pieterse	101	2013/01/25 09:27:32	IN: Virditech AC5000 IN	Branch TEST	Not Assigned
Raina	315	2013/01/25 07:54:06	IN: Virditech AC5000 IN	Not Assigned	Not Assigned
Thulani	290	2013/01/25 09:33:22	IN: Virditech AC5000 IN	Cape Town	Not Assigned

When the person transact on one of the selected terminals, a system wide popup will appear on the user's Remote Workstation overriding any application active on the users' Desktop, stating that this person has entered or left the premises.



The secondary function of this software is to print an evacuation list in the event of an emergency.

This list will be printed to the default printer of the Remote Workstation.

There are three different ways of triggering the printing of the evacuation list.

1. Manually click "Print evacuation list" on the In-out software.
2. A pre-selected supervisor triggers the printout by placing his "panic" finger on one of the selected Virdi terminals.
3. The building fire system alarms, and if it is connected to one of the Virdi terminal's inputs, it will cause the evacuation list to be printed automatically.



Cape Town Head Office

Collingwood Building
Blackriver Park
1 Fir Rd
Observatory
+27 (0)21 404 4600

Johannesburg

2nd Floor
Senate House
c/o van Riebeeck Ave & Terrace Rd
Edenvale
+27 (0)11 452 9604

Sales: info@virditech.co.za

Technical: support@virditech.co.za

www.virditech.co.za